


Instructions on the Assembly of a diagonal corner wardrobe

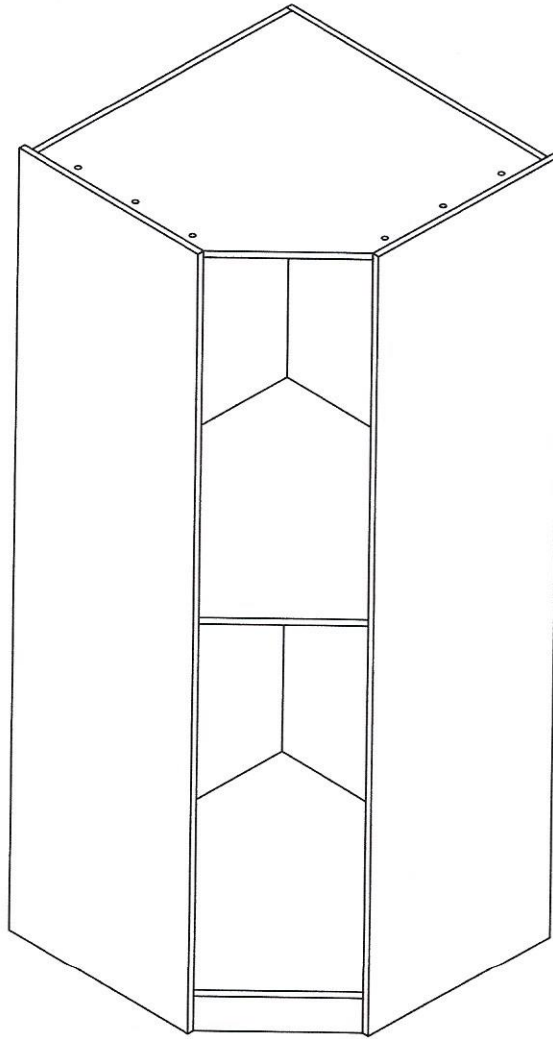

Note: All measurements in mm (millimeters).

Standard height robe is 2260 high, 900x900 wide & 600 deep, 100 high integral plinth.
Each robe is supplied with a shelf for a choice of 2 positions or can be disregarded.
All robes come with a 25mm void at rear allowing for scribing over skirting boards.
All panels are 18mm thick. Door thickness vary per manufacturer.

Back panel
2260x839

Back panel
2260x857

Fixed top panel
839 x 839

Intermediate shelf
839 x 839


Plinth rail
839x100

Plinth rail
821x100


Gable end
2260x600

Base
839 x 839

Plinth rail
angled to suit

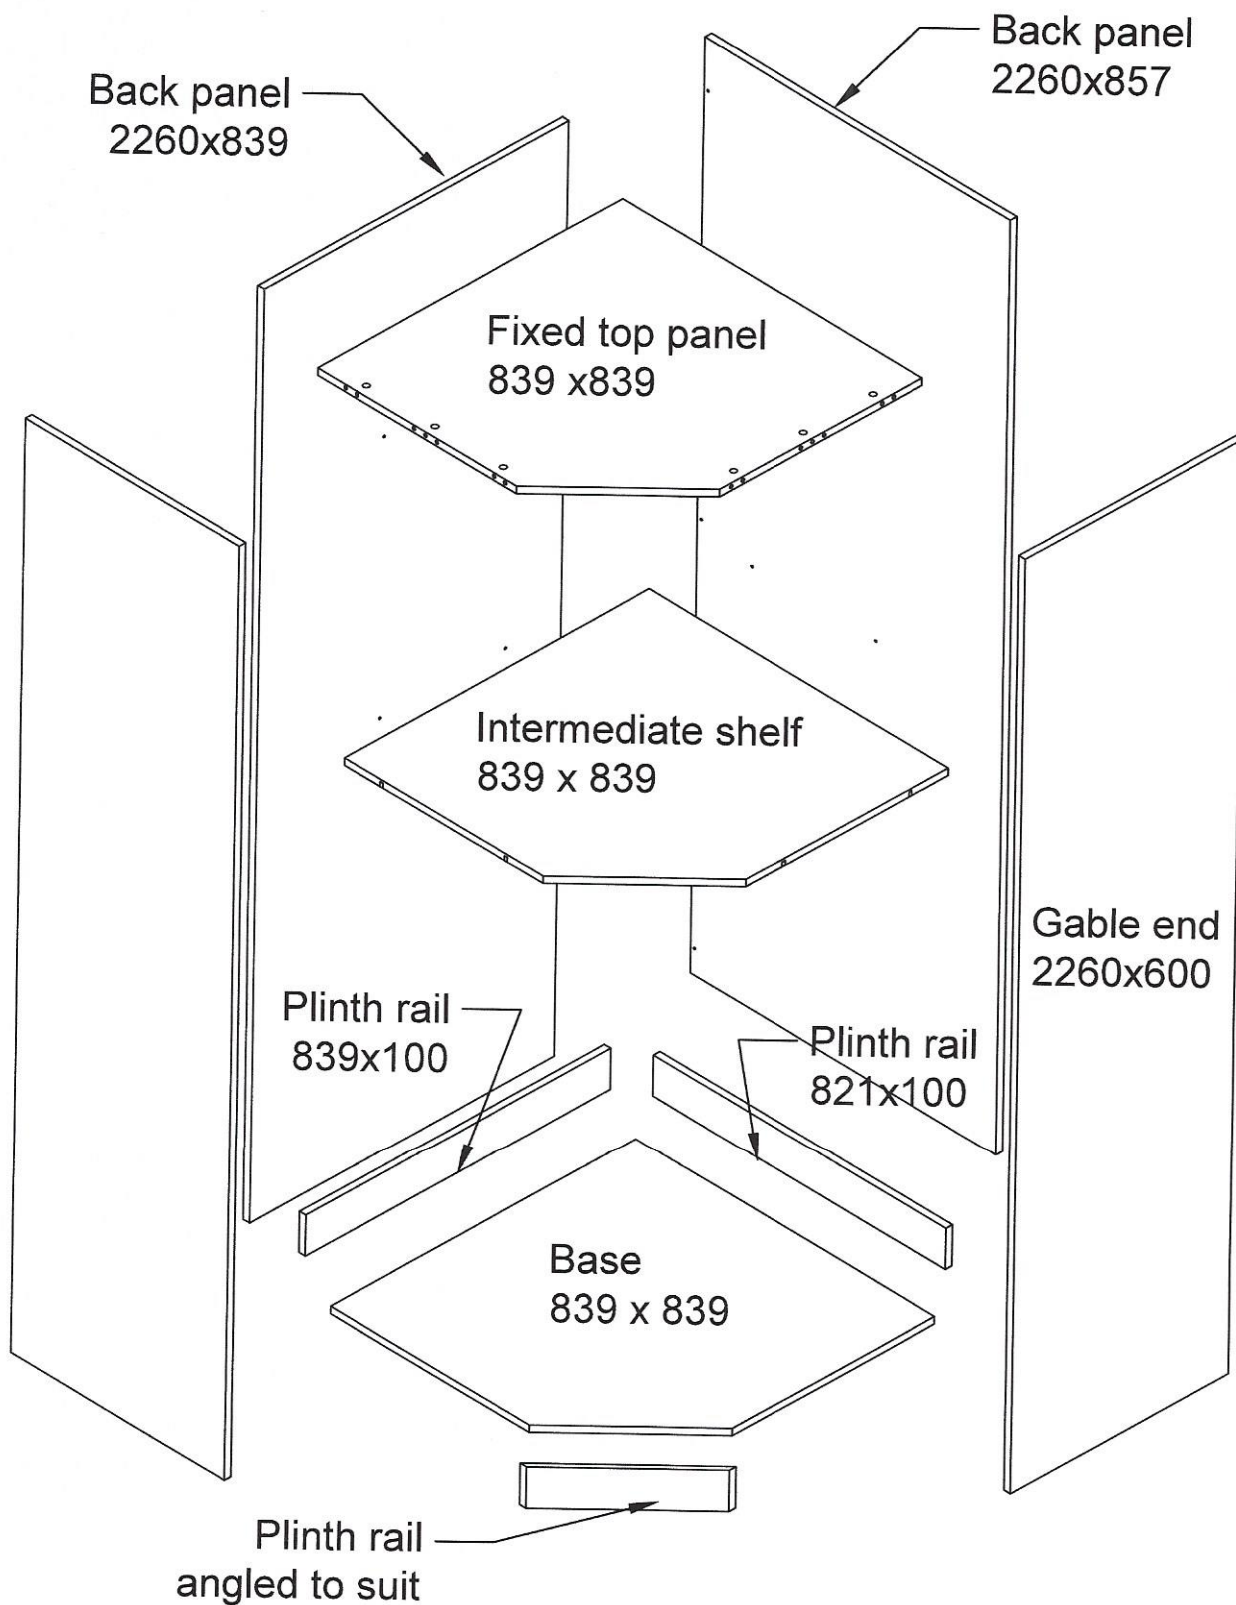

Insert fixings into backs..

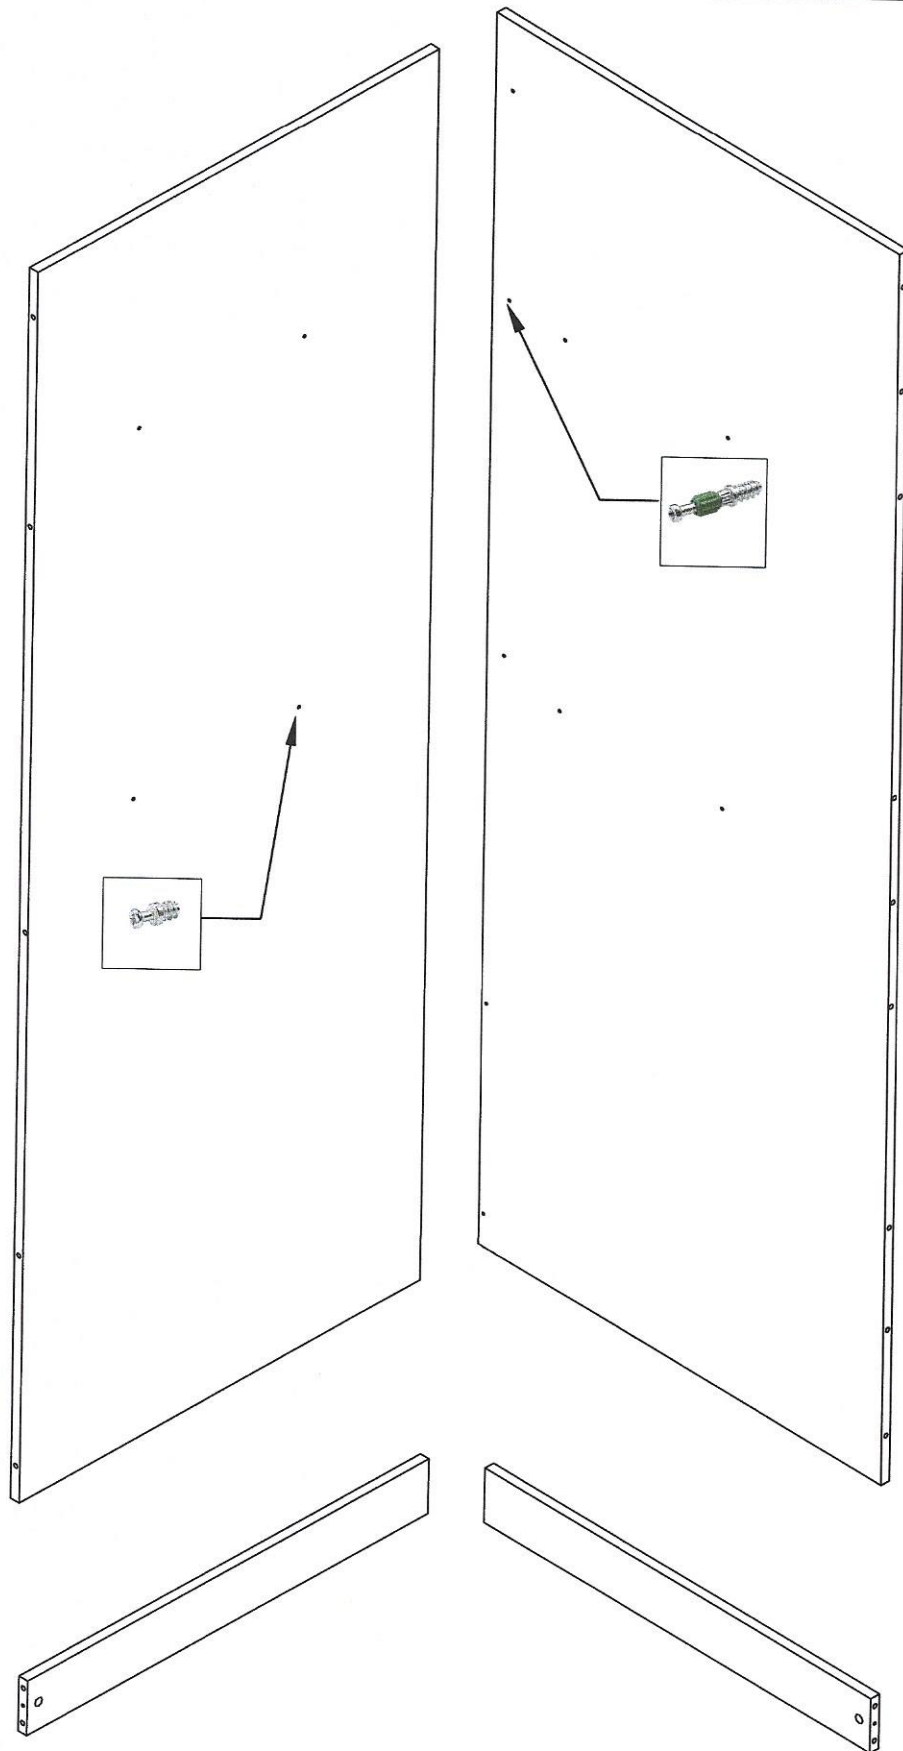

Assembly Of Corner Robes (guidance)

2 Person Assembly Built Upright

1. First attach all fixings, ie, cams and dowels as per standard robe instructions.
2. Start with the left hand gable first.
3. Attach the 839 wide back to this gable with the cam & dowel.
4. With the second person holding the top, fix into place on the left end with the cam & dowel and then screw through the back into the top keeping it level with the top of back.
5. Attach the 2 backs together now using the cam & dowel and then again screw through the back into the top keeping it level again.
6. Now the right hand gable can be attached with the cam & dowel.
7. Fix the 839 wide rail into position with the cam & dowel at one end and then screw through into the back panel.
8. Same fixings for the 821 wide rail.
9. The front angled rail is fixed from the back, screw through the rail into the robe end.
10. The rest of the assembly for the diagonal corner robe is as per standard robe construction with the exception of the hinge which is a 45dg hinge, this differs to the other standard robe hinges.
11. The hanging rail is made up of 2 rails, a corner piece and 2 supports.

